


## Matrimatic Gold: Using the memory function



Turn on the machine.  
The machine shows straight  
stitch 001.

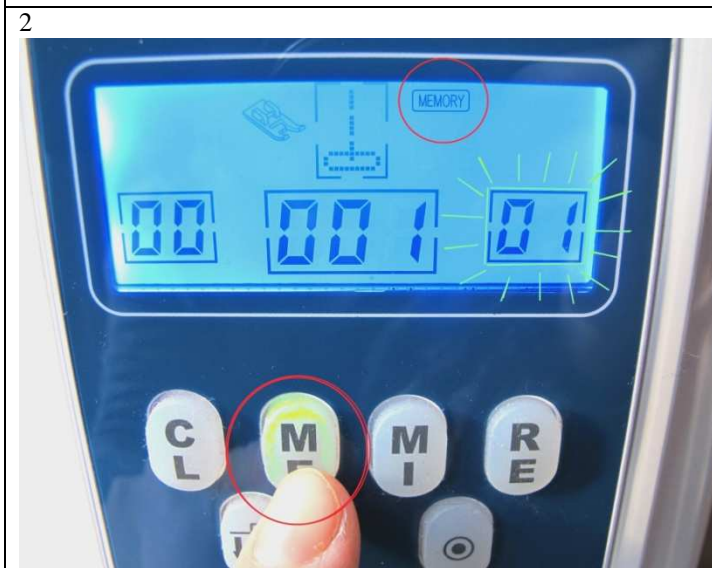

Push the memory  
button(ME= memory). The  
button turns green and on  
the screen you'll see the  
word : « memory ». On the  
right side “01” flashes.



Choose the first stitch (in  
our case stitch no. 110) and  
use the numbers to add the  
stitch.


Every stitch can be mirrored, push the  
mirror button **before** choosing  
(MI=mirror).

4



On the screen you'll see the image of stitch 110.  
 On the left, you'll see you have memorised the first stitch. On the right "02" flashes. It means you can now add the second stitch.

5

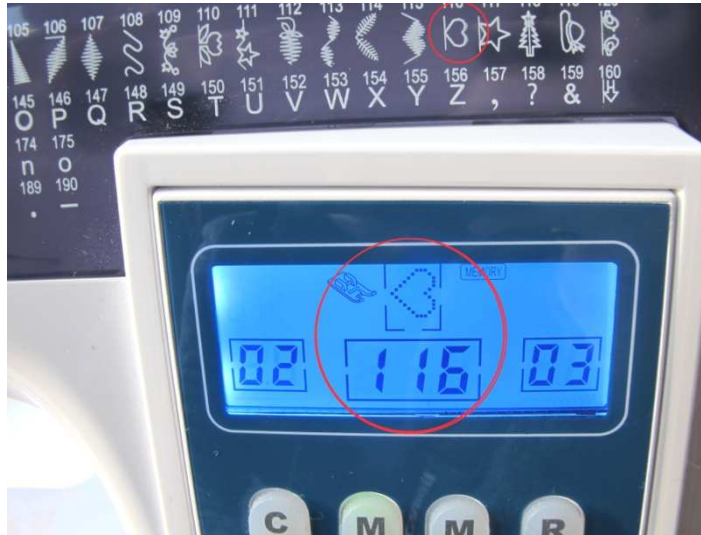

Choose the second stitch (in our case stitch 116).




[www.matri.eu](http://www.matri.eu)

6



Choose the third stitch (in our case stitch 054).

7

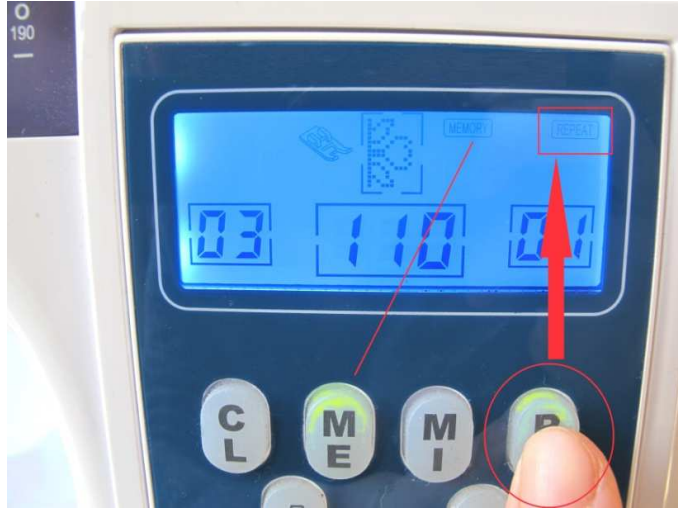

You can now start sewing the stitches (see image 8, we sew without the footcontrol). The machine stitches the three stitches and stops.

You can also use the button repeat (RE= repeat). The machine will continue stitching the chosen stitches.



Start stitching, first on a piece of fabric for testing to see if the stitches please you.



8

9



If you push the memory button again, you'll get out of the memory menu. The button will not be green anymore and you'll lose the chosen stitches.

