

Matrimatic Silver: Using the memory function

1



Turn on the machine. The machine shows the straight stitch 001.

2



Push the memory button (ME= memory). The button turns green and the screen shows the word “memory”. On the right “01” flashes.

3



.Choose the first stitch (in our case stitch no. 110). Confirm with the save button (SA=save). Each stitch can be mirrored separately. Push the mirror button **before** pushing the save button (MI=mirror) .

4



On the screen you'll see the image of stitch 110.

On the left, you'll see you have memorised the first stitch with help of the save button . (SA=save).

On the right “02” flashes. It means you can now add the second stitch

5



Choose the second stitch (in our case stitch 116).

Confirm with the save button.



6



Choose the third stitch (in our case stitch 054).

Confirm with the save button.

7



You can now start sewing the stitches (see image 8, we sew without the footcontrol). The machine stitches the three stitches and stops..

You can also use the button repeat (RE= repeat). The machine will continue stitching the chosen stitches.

8



Start stitching, first on a piece of fabric for testing to see if the stitches please you.

www.matri.eu

9



If you push the memory button again, you'll get out of the memory menu. The button will not be green anymore and you'll lose the chosen stitches.

www.matri.eu